

BBQ OPERATING INSTRUCTIONS

READ THROUGH THE FOLLOWING INSTRUCTIONS BEFORE YOU BEGIN TO USE THIS OUTDOOR KITCHEN.

LIGHTING INSTRUCTIONS:

Before lighting:

1. Ensure main front roller door is at **full open** position so as to disengage gas shut off switch which is located at the top right corner, as shown in diagram 1 & Diagram 2.

Diagram 1. Gas Shut Off Switch Location



Diagram 2. Gas Shut Off Switch




2. Turn on **front** burner of cook top required, push down knob and rotate anti clockwise slowly until piezo igniter clicks as shown in diagram 3. Hold down for 10 seconds until burner stays alight. Repeat process for rear burner if required.
3. To turn off when finished, turn knob to **off** position as shown in diagram 4.

Diagram 3.



ON

Diagram 4.

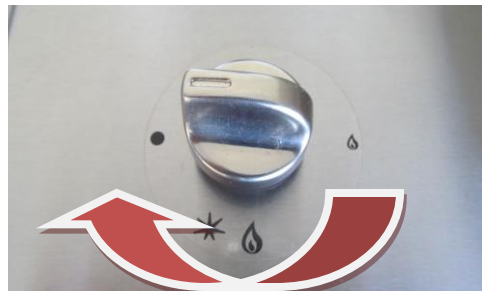

OFF

After each cooking session, scrape food particles off hotplate/s and apply layer of cooking oil before replacing lid/s for protection. Full instructions in drawer #1 below.